


3 STEPS TO SIZING LSO/TLSO

- ① **Determine LSO/TLSO size (Short or Tall)**
-Measure Distance from Sternal Notch to Navel.
- ② **Determine Side Panel Circumference**
-Average Lower Rib and Hip Circumference.
- ③ **Determine TLSO Upgrade Kit Size**
-Use the measurement in step ①.

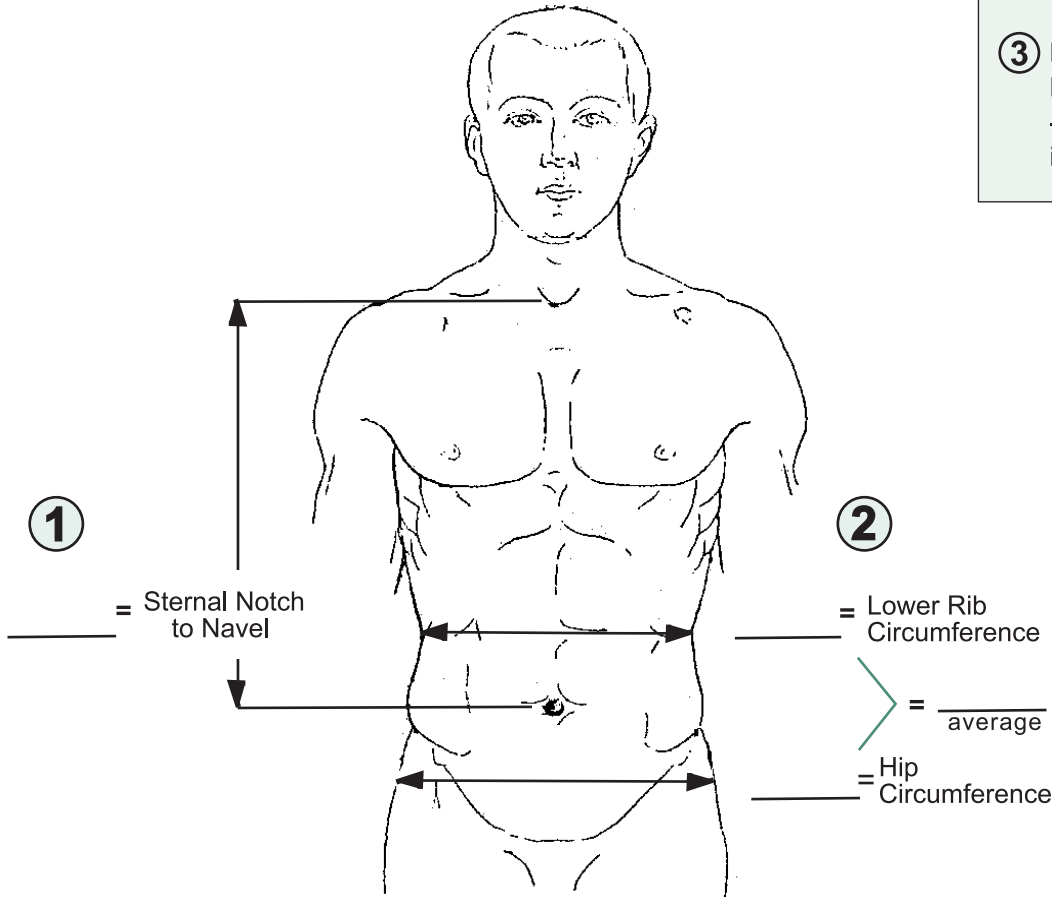

① BACK PANEL

<14.5" = **Short (13")**

≥14.5" = **Tall (16")**

② SIDE PANELS

26"- 39" = **Small**

36"- 49" = **Large**

32"- 47" = **Small**

44"- 59" = **Large**

③ UPGRADE KIT

11"- 13.5" = **X-Short**

12.5"- 16" = **Short**

14.5"- 18" = **Tall**

TLSO

Cat No.

Short / Small

991030

Short / Large

991031

Tall / Small

991070

Tall / Large

991071

LSO

Cat No.

Short / Small

990040

Short / Large

990041

Tall / Small

990060

Tall / Large

990061

TLSO UPGRADE KIT

Cat No.

X-Short

991053

Short

991051

Tall

991050